



## ISOLATED POWER SYSTEMS SERVICES

[www.benderinc.com](http://www.benderinc.com)

Factory Trained and Authorized Technicians

NFPA 99 and NEC Compliant Testing and Evaluation of Isolated Power Systems

Maintain and/or Retrofit Obsolete Equipment

Clear and Comprehensive CMS\* & TJC\*\* Documentation

Troubleshooting of Alarms

Engineering Services


Please contact us today to schedule your Initial Evaluation or Annual Testing  
[Medical.Services@bender-us.com](mailto:Medical.Services@bender-us.com)  
1-800-356-4266

\* Centers for Medicare and Medicaid services

\*\* The Joint Commission

**BENDER Services provide a wide range of services to ensure optimal performance of your Isolated Power Systems Equipment:**

- Industry-leading isolated power systems manufacturer with over 60 years of experience
- Nationwide Coverage
- Complete services for new Isolated Power Systems regardless of original manufacturer
- Testing performed utilizing BENDER developed industry leading LT3000 test instrument

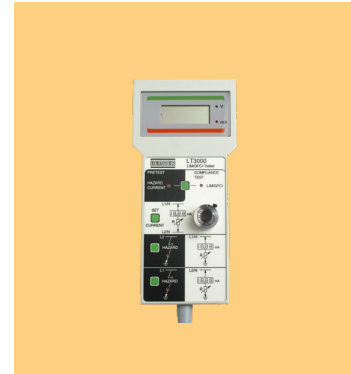

**BENDER Services provides thorough and comprehensive testing and evaluation services for annual and bi-yearly testing required by NFPA 99, NEC, and many accrediting agencies.**

- Measurements of hazard current and calculations of system impedance
- Receptacle ground tension test
- Ground continuity testing
- Receptacle polarity verification
- Touch voltage verification of exposed metal surfaces
- Line Isolation Monitor (LIM) functionality verification via external fault testing
- Verification of panel circuit breaker terminal torques

**Retrofit/Replace Line Isolation Monitors with cutting-edge LIM2010**

The LIM2010 line isolation monitor is ideal for retrofitting applications regardless of the current LIM's make and model. No metal needs to be cut in most applications, and simple instructions facilitate a fast changeover. Its automatic self-calibration, self-check and digital display allow for yearly performance testing as opposed to bi-annual testing for analog LIMs (per NFPA 99).

**Why Choose BENDER Services?**

- Extend your qualifying BENDER equipment warranty
- Generate electronic documentation required for accrediting agency compliance audits
- Provide hospital staff training for proper understanding, care, and use of Isolated Power Systems
- Cleaning/vacuuming of panel interior
- LIM and accessory software updates\*

Please contact us today to schedule your Initial Evaluation or Annual Testing  
[Medical.Services@bender-us.com](mailto:Medical.Services@bender-us.com)  
1-800-356-4266

\* Software updates pertain to qualifying BENDER manufactured equipment only