

LINETRAXX® Serie WF...

Consisting of an RCC420 signal converter and a WF... measuring current transformer Flexible WF170, WF250, WF500, WF800, WF1200, WF1800 measuring current transformers



LINETRAXX® Serie WF...

Consisting of an RCC420 signal converter and a WF... measuring current transformer

Flexible masuring current transformers WF170, WF250, WF500, WF800, WF1200, WF1800



WF... series measuring current transformers

Device features

- Flexible measuring current transformer in different lengths
- Space-saving design, quick installation
- Easy retrofitting into existing installations
- Can be installed without the need to disconnect the conductors
- Connection monitoring WF... measuring current transformers
- For RCMS460/490 series residual current monitoring systems
- · For RCM420 series residual current monitors
- Analogue output (*U*, *I*) for external measuring devices
- RCC420 with push-wire terminals (two terminals per connection)

Product description

Flexible WF... series measuring current transformers are highly sensitive measuring current transformers, which measure AC currents in conjunction with a RCMS460/490 series residual current monitoring system and convert them into an evaluable measuring signal.

They consist of one flexible WF... measuring current transformer and one RCC420 signal converter.

Connection to the respective residual current monitor is via a two-wire cable.

Application


- Residual, fault and nominal current monitoring of loads and systems which cannot be switched off
- EMC monitoring of TN-S systems for "stray currents" and additional N-PE connections in the central earthing point (CEP)
- Monitoring of PE and equipotential bonding conductors to ensure they are free of current

Installation instructions

- · Make sure to pass all live conductors through the measuring current transformer
- Arrange the conductors so that they pass centrically at right angle through the opening
- Do not place the measuring current transformer close to strong magnetic fields

Wiring diagram

Connection to the respective RCMS460/490 residual monitoring system or to an RCM420 residual current monitor.

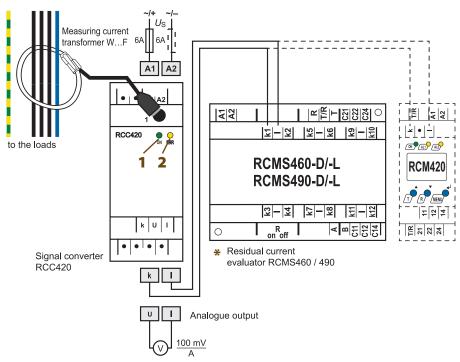

- Power On LED "ON": lights up when voltage is available and when the device is in operation
- 2 Alarm LED "ERR": Lights in the event of a short-circuit and interruption of the WF...
- * When using software version D233 V 2.21 or an earlier version, switch off CT monitoring
 - When using software version D233 V 2.31 or higher, set the CT type to "flex".





Technical data

Electrical safety	
Standard: RCC420	IEC 61010-2-030: 2004-05-01
Pollution degree	3
Rated insulation voltage	250 V
Standard: WF	IEC 61010-1 and IEC 61010-2-032 CAT III
Pollution degree	2
Rated insulation voltage (CAT III)	1000 V _{rms} or DC
Supply voltage	
Supply voltage U _S	see ordering information
Power consumption	≤ 3 VA
Measuring circuit	
Measuring range	100 mA20 A
Rated transformation ratio	K _n (U - I): 100 mV/A, K _N (k - I): 1.67 mA/A
Rated burden (signal output k, l)	68 Ω
Rated frequency	422000 Hz
Rated continuous thermal current Icth	1 kA
Rated short-time thermal current Ith	60 kA/1 s
Rated dynamic current I _{dyn}	150 kA/40 ms
Environment/EMC	
EMC	IEC 62020
Operating temperature	- 25+ 55 ℃
Climatic class acc. to IEC 60721	
Stationary use (IEC 60721-3-3)	3K5 (except condensation and formation of ice)
Transport (IEC 60721-3-2)	2K3 (except condensation and formation of ice)
Long-time storage (IEC 60721-3-1)	1K4 (except condensation and formation of ice)
Classification of mechanical conditions acc	c. to IEC 60721
Stationary use (IEC 60721-3-3)	3M4
Transport (IEC 60721-3-2)	2M2
Long-time storage (IEC 60721-3-1)	1M3

Connection RCC420			
Connection type		push-wire terminal	
Connection properties			
rigid	0.22.5 n	nm ² (AWG 2414)	
flexible without ferrule	0.22.5 n	nm ² (AWG 2414)	
flexible with ferrule	0.21.5 mm ² (AWG 2416)		
Stripping length		10 mm	
Opening force		50 N	
Test opening, diameter		2.1 mm	
Connection measuring current transformer WF	PS/2 plug		
Cable length WF		2 m	
Cable lengths RCMS-RCC420			
Single wire $\geq 0.75 \text{ mm}^2$		01 m	
Single wire, twisted ≥ 0.75 mm ²	010 m		
Shielded cable $\geq 0.5 \text{ mm}^2$		040 m	
Shielded cable (shield to terminal I, not connected to earth)	recommended:	J-Y(St)Y min. 2x0.8	
Other			
Operating mode	CC	ontinuous operation	
Mounting		any position	
Degree of protection, internal components (IEC 605)	29)	IP30	
Degree of protection, terminals (IEC 60529)		IP30	
Enclosure material RCC420		polycarbonate	
Screw mounting	2 x M4	with mounting clip	
DIN rail mounting acc. to		IEC 60715	
Flammability class		UL94V-0	
Documentation number		D00072	
Weight		RCC 420 ≤ 160 g	
	WF170 \leq 160 g	WF800 ≤ 230 g	
	WF250 \leq 180 g	WF1200 \leq 310 g	
	WF500 \leq 200 g	WF1800 ≤ 430g	

Note: The measuring current transformer is adapted to the associated signal converter RCC420.

Ordering information

Length A	Supply voltage <i>U</i> s¹¹		Typo	Art. No.
measuring current transformer	DC	AC	Туре	AI C. NO.
170 mm	9.694 V	1672 V, 42460 Hz	WF170-1	B 7808 0201
	70300 V	70300 V, 42460 Hz	WF170-2	B 7808 0202
750 mm	9.694 V	1672 V, 42460 Hz	WF250-1	B 7808 0203
250 mm	70300 V	70300 V, 42460 Hz	WF250-2	B 7808 0204
F00	9.694 V	1672 V, 42460 Hz	WF500-1	B 7808 0205
500 mm	70300 V	70300 V, 42460 Hz	WF500-2	B 7808 0206
800 mm	9.694 V	1672 V, 42460 Hz	WF800-1	B 7808 0207
800 MM	70300 V	70300 V, 42460 Hz	WF800-2	B 7808 0208
1200 mm	9.694 V	1672 V, 42460 Hz	WF1200-1	B 7808 0209
	70300 V	42460 Hz, 70300 V	WF1200-2	B 7808 0210
1800 mm	9.694 V	1672 V, 42460 Hz	WF1800-1	B 7808 0221
	70300 V	42460 Hz, 70300 V	WF1800-2	B 7808 0222

¹⁾ Absolute values


Accessories

Type designation	Туре	Art. No.
Mounting clip for screw mounting (1 piece per device)	XM420 (RCC420)	B 9806 0008

Dimension diagram XM420


Dimensions in mm

Open the front plate cover in direction of arrow!

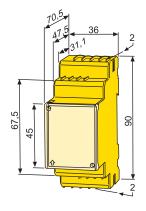


Screw mounting

Note: The upper mounting clip must be ordered separately (see "Accessories")

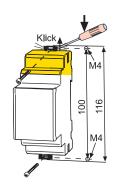

Dimension diagram WF... series measuring current transformers

A = For details about the length of the measuring current transformer refer to ordering information

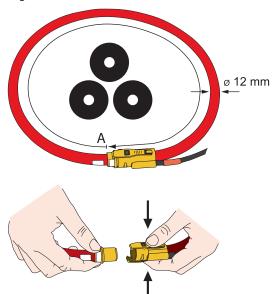

Locking connector measuring current transformer W500F...W1800F Keep the locking connector clean



Locking connector measuring current transformer W170F...W250F



Bender GmbH & Co. KG

P.O. Box 1161 • 35301 Gruenberg • Germany Londorfer Strasse 65 • 35305 Gruenberg • Germany Tel.: +49 6401 807-0 • Fax: +49 6401 807-259 E-Mail: info@bender.de • www.bender.de

